


Installation method

 
1 Draw the position of mounting holes

- According to the installation position, hold the mounting plate in place with one hand where the machine will be installed. Use your other hand to draw the positions of mounting holes in pencil or draw them directly according to the size.

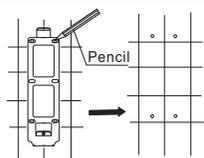


2 Drill holes

- In accordance with the position of the drawn holes, drill four holes 6 mm in diameter and press the expansion pipes into the four holes.




3 Fix the mounting plate

- Align the installation holes of the installation panel with the expansion pipes and fix them with self-threading cross screws.

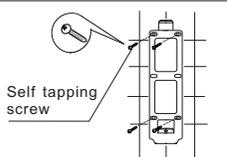


4 Install the machine

- The mounting plate has protruding hooks for inserting into the slots on the machine and allow it to hang from the mounting plate. Align the slots with the hooks on the mounting plate and push the machine down until the anti-theft screw holes on the machine and mounting plate are aligned

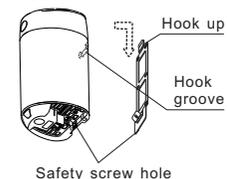

5 Fix anti-theft screws

- Screw anti-theft bolts into the bolt holes to fix the machine to the mounting plate. Install the air intake grill and make sure the grill is locked.

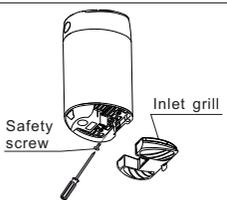

Test run

Steps	Confirm information	Check & Notice
1 Shake the machine gently	The machine is installed firmly without shaking or noise	Shaking and noise will occur when the machine isn't installed firmly
2 Confirm the power output with a voltage meter	The voltage is at the required level	Misusing the voltage is likely to cause personal injury or machine burning out
3 Switch on the power	Close power supply	Power supply must match the requirement for the machine. Please check the power when the indicator light is not bright.
4 Dry your hands under the machine	High speed air blow	Confirm whether your hands are at the correct distance from the sensors
5 Turn on the perfume dispenser switch	The machine emits fragrance	Press the setting button to check the three perfume setting modes

Perfume mode setting

Once the machine is powered on, the hand dryer is on standby and the perfume dispenser stays closed. Press the button on the right side of display screen to turn on the perfume dispenser. As soon as the dispenser starts working, it shows "12h" on the screen, which is the factory default mode. You can choose one of three working modes including "12h", "auto" and "24h" by pressing the settings button that is on the left side of display.

1) "12h": with this mode, the perfume dispenser works 12 hours each day. During the 12 hours, the perfume dispenser works in cycles of 10 minutes active and pausing for 10 minutes. (small circle). Then closed for the remaining 12 hours of the day (big circle).

2) "auto": with this mode, the perfume dispenser turns on and off automatically according to light changes in the environment (including natural light and electrical lights) During activated times, the perfume dispenser also works for 10 minutes and, pausing for 10 minutes in a cycle as mentioned above.



3) "24h": with this mode, the perfume dispenser works 24 hours each day. Also working for 10 minutes and pausing for 10 minutes in cycles as mentioned above.

Daily use and maintenance

External maintenance

- Clean the shell with a soft dry cloth or dry towel. Use neutral detergent. Do NOT use organic solvents, acid or alkali toilet cleaner, cleaning brush etc.

- ❗ Otherwise, it will damage the surface finish or cause discoloration.
- ❗ Please don't apply any alcohol to the surface. If using a chemical cloth, please follow the instructions.

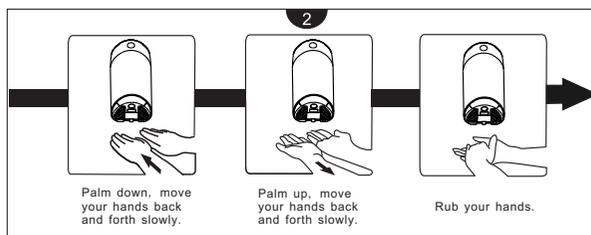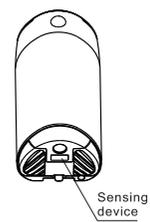

Regularly check the air inlets to ensure that they are free from dust and debris. Simply wiping the inlets with a soft cloth should be sufficient to remove dust and debris, however, removing the cover and cleaning the filter is recommended at least every six months.

- If the air inlets get clogged, further cleaning or a filter change might be required.
- If required for high usage environments, a regular filter change is advisable. Contact the Handy Dryers Helpline for more information.


Packing list

main machine	1	User manual	1
5×25mm self tapping screw	4		
5mm expansion pipe	4		

fleurillo 
www.handydryers.co.uk

Handy Dryers
Tel: 01279 466500
Email: info@handydryers.co.uk
Unit 9 Stort Valley Industrial Estate
Bishop's Stortford
Hertfordshire
CM23 2TU
United Kingdom

USER MANUAL

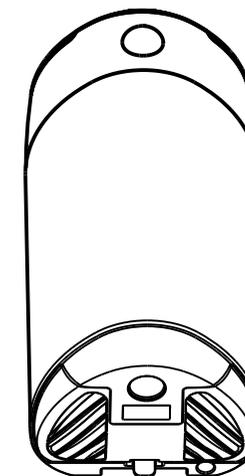

2806-6SM004-V2.0

Specification

Appearance size	345x170x170mm
N.W	3.8kg

Hand Dryer

Voltage	AC220-240V~	Motor	Brush motor
Phase	Single-phase	Sensing distance	15-20cm
Input	1150-1350W	Protection class	IPX1
Heating power	650-750W	Wind speed	68m/s

Perfume Dispenser

Air-blower	DC12V	Tank volume	250ml
Blower power	2.2W	PTC heating power	50W



WARNING

If you don't use this unit properly or follow the safety guidelines carefully, it can lead to serious personal injury or property damage.



Prohibited

- Do not open the front panel. This can cause an electric shock.



Do not allow
The unit get
wet

- Do not let children hang from the unit. Otherwise, this may cause the unit to drop.



Do not use in
the bathtub
or shower room

- Do not allow the unit to get wet. This may cause electric shock.
- Do not use in a humid environment. For example, in the bathroom where it may be splashed with water directly and places where condensation may form. This may cause electric shock or malfunction.



Prohibit
disassembling

- Do not modify the unit. This may cause fire, electric shock or personal injury.



Please obey
the instruction.

- Rated power is required
- If the voltage is $\pm 10\%$ over the rated power, it will cause machine to malfunction. If using incorrect power supply, fire, electric shock and machine malfunction will happen.

Installed

- Please use dedicated socket
- If the unit is wired with other appliances, it may cause abnormal heat and catch fire.
- Power must be cut off during maintenance to prevent electric shock.
- Air filter must be installed.
- If the machine does not work or has abnormal function, cut off the power supply to prevent accidents or injury. Close leakage circuit breaker or ask supplier to check and repair where applicable and in line with the supplied warranty. Electricity leakage or short circuit can lead to fire.

▲ Machine must have reliable ground connection.

▲ Attention during installation:

Do not install when the machine is powered.



Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.




- Environmental Protection**
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.


Feature

- No touch hand drying, ensures complete hygiene
- Beautiful stainless steel solid shell
- Wonderful fragrance dispenser ensures a pleasant smelling washroom. intelligent sensitization technology and automatic operating system works seamlessly.
- Three different working modes to customize your experience
- Automatic heating system turns heating of the airflow on and off depending on the temperature.
- Auto-stop function. After 45 seconds the auto-stop function will activate. When hands are placed under the unit again, the dry will activate.

Name of each part

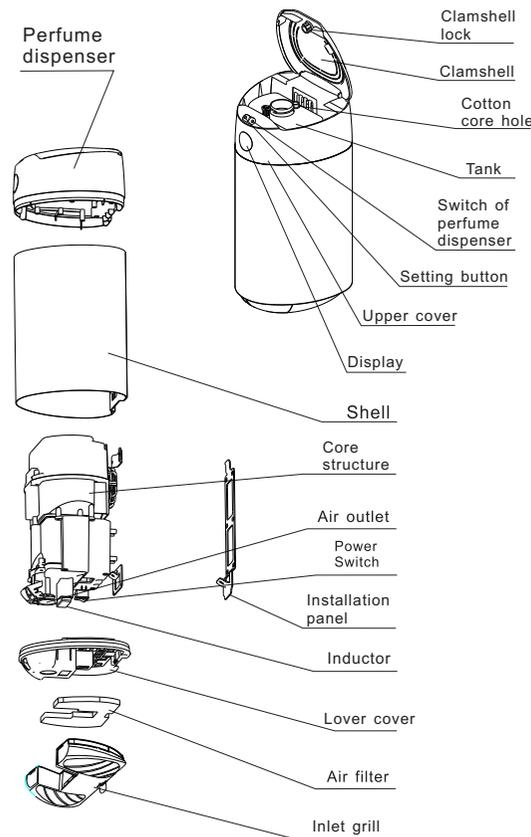

Electrical diagram

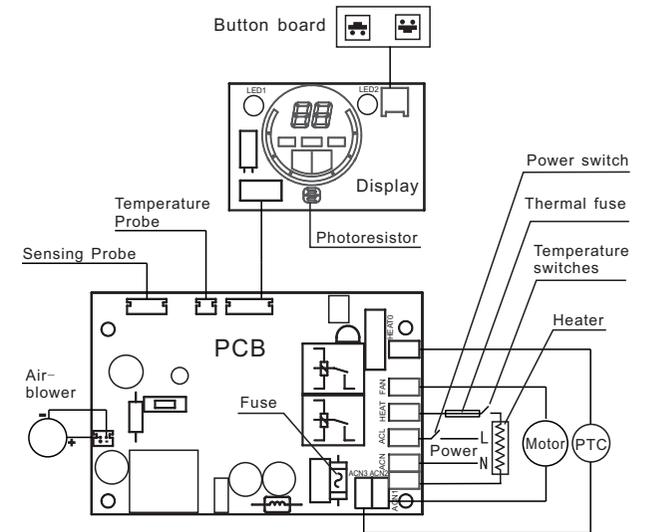


Attention before installation

■ Do not install in the following places. Doing so may cause malfunction.

- Places with temperature below -10°C or over 40°C
- Places splashed with water directly
- Places which receive strong or direct sunlight.
- Areas which are prone to high levels of condensation.
- Places filled with corrosive gas, oxidative gas or reducing gas.
- Places out of altitude 0~2000m

■ Installation location

- The following picture shows the recommended location. (If there is floor or obstacles below the hand dryer, the distance between machine and floor or obstacles should be at least 400mm.)
- Keep the right side of the dryer away from any mirror or walls where water droplets may splash the unit.
- Avoid places near to people or doors where the unit may be easily bumped into.
- Select a flat wall to install the unit.

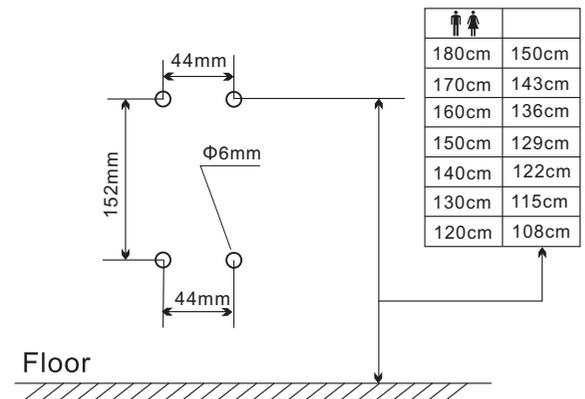

- Power cord should be 1.0mm²-1.5mm²