

Hand Dryer Operation Instruction

Dear customer:

products. Please read this instruction before installation and keep it for installation and usage or any other further reference.

Thanks for your purchase of my company's

very easy to use, reducing waste, and no touching clean hands which effectively to avoiding pathogen cross infection

Features:

and re-contamination 2, It has outstanding performance with most advantage chip control technology and infrared sensor... 3, It has unified high speed motor with RPM of 22000, dryers the hands with 10-15 seconds.

1, It is equipped with automatic infrared ray induction system,

- 4, This series product is all with over current protection, which effectively eliminates accidents.
- 6, It only needs expansion pipe and screw hook when install ation, then hang the machine, cut off the power when maintenance. It is suitable for all departments in hospitals,
- school, food and pharmaceutical manufacturers, airports, office buildings, hotels, government agencies and research institutions and other places. Technical parameters:

Waterproof Grade

IPX1

Rated Voltage AC110V

AC220-240V

Rated Frequency	50/60HZ	Wind Speed	80m/s	
Rated Power	950W	Sensing Distance	12 ± 3cm	
Ambient Temperature	0–40℃	Drying Time	10-155	
Installation	Wall Mounting	Overall size	300*275*100mm	
——1——				

or else it has electric shock hazard. 3, You must cut off power before operation and ensure the protection no power.

shock.

hazards

Note before installation:

4, Requests to install leakage circuit breakers or protection against fire

2, You must commission professional electrician to install power lines,

⚠ Warning 1,Do not fix it in the place with water or water vapor in surface, not install in the bathroom which with heavy moisture, in order to avoid electric

- 5,Do not decompose, repair or any alteration of this machine without authorization, otherwise there is a risk of electric shock, fire and other accidents; /\Attention
- 1,To ensure that no other things in the outlet around 400mm. Meanwhile, do not install it above the stainless steel or artificial marble such shining
- surface location, otherwise prone to misoperation. 2, The body should be firmly fixed to the smooth wall to avoid injuries caused by the decline of product or product damage 3,Do not install the products in such place with corrosive or flammable gases or objects, it may cause fire or product failure and malfunction

4.Do not install the products in such environment with multi dust or in

high temperature, it may cause product damage.


Components Name:

Air mouth

Reaction


system

- Sensor distance trimmer Filter cartridge Body

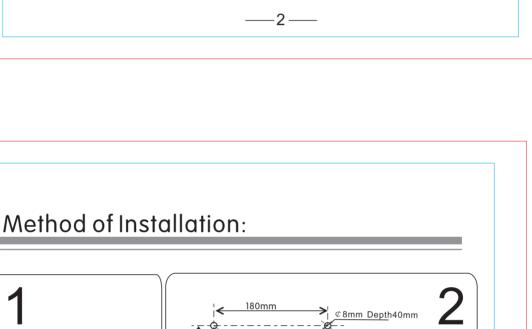

Hole for buried wiring

Power switch

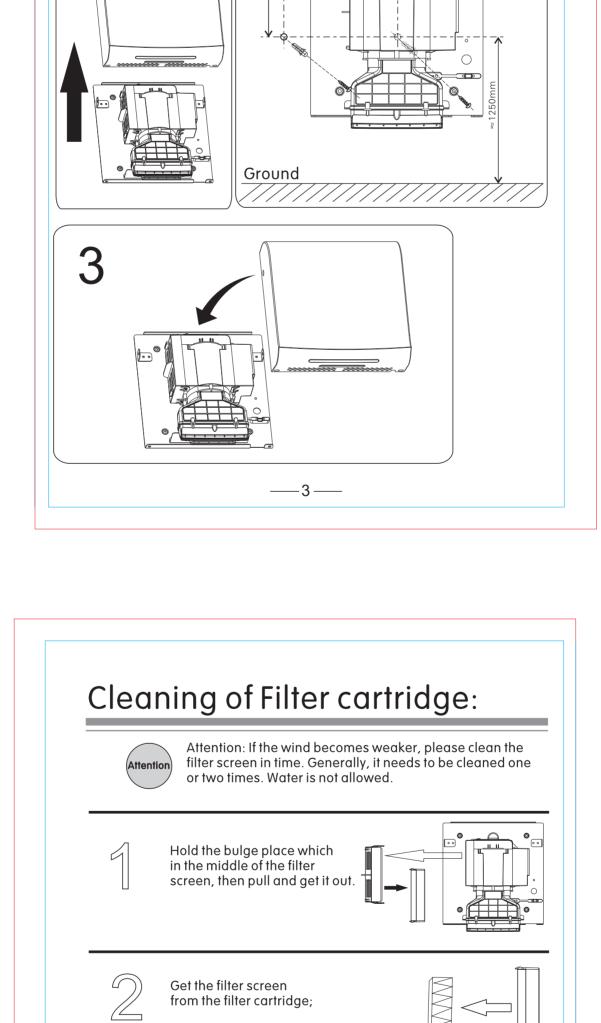

Clean the dust on the filter screen, do not wash. If there is too much dust, please replace it;

Put the filter screen at the right position in the filter cartridge, and inset the filter cartridge

into the body.



maintenance.

- Maintenance:
- when it is dirty. The acid and alkalescent bathroom detergent and BEN, lacquer thinner, abrasive etc are forbidden. Besides, do not use nylon brush such friction tool clean it avoiding be scratched; 2, When cleaning the shell prevent the water droplets into the machine, so as to avoid electric shock or short circuit;
- please commission the professional to repair it.; 6, If long time no use of this machine, please cut off the power, and store it in clean and dry indoors with sealed after cleaning.

1, Please cut off the power and clean the shell with natural detergent

3, It's better to cut off the power when off duty, to extend the service life; 4, If the power software cord is damaged, it should be replaced with specialized software or buy components from factories or dedicated

5, If the machine breaks down, cut off the power quickly and stop work.,

1, The product warranty period is one year. 2, The service within warranty period for products, which came into effect from the date of buying the machine. 3, Within one year after purchasing, consumers find the machine failure

Terms of guarantee:

- caused by the product itself reason, then they can go to the purchasing place to maintenance and replace the machine for free with original invoices and completed and the quality assurance card stamped by dealers.
 - 4, The following are not in the scope of free maintenance: ◆ Improper use and the fault caused by demolition, alteration and repair by technical persons without our company authorization. Fires, earthquakes, thunder and other natural disasters cause

faults, and abnormal voltage causes the faults.

◆ The faults caused by non matching power.

◆ The faults caused by long time operation in bad working condition. ◆ Not quality assurance card or the cards is flit not explicitly or correctly. 5, Over warranty period or it is not free maintained products, while our company remains committed to serving.

-5-